

**RM-L1130+8  
Instruction for UNIVERSAL  
LCD/LED TV REMOTE  
CONTROLLER**

Thank you for using our company remote controller products. When it is the first time to put in the batteries, please try it first. If it could work well with all of its functions, the product can be used directly without setup. If it could not work well, it should be set with the following methods before controlling your TV. This remote controller would not lose its memory when you change batteries, no need to reset.

**Introduction:**

RM-L1130+8 is the newest universal LCD/LED TV remote controller, Comprehensive care at different levels need, it can control old or new TV, famous brand or un-famous brand TV, nearly all models for TV. Commonly used functions and menu button all including. Easy setup, conveniently use, it is the best choice for your remote controller losing, damage, replacement, it will bring more convenient for your life.



**Battery Installation**  
In accordance with the "+, -" symbols which is indicated inside the battery cabinet, open the cover and put into two new AAA (AAA) batteries (non-ratiomed), which is shown in the figure.



**Battery Description**

- The remote controller is a low-power consume product. The lifetime of batteries is about 12 months under normal circumstances. If it is improperly used or operated, the lifetime would be shortened.
- Please do not put old and new batteries or different types of batteries together.
- In case of battery leakage, the batteries must be removed and the battery cabinet should be cleaned before putting into new batteries.
- You'd better remove the batteries from the battery cabinet if you intend to stop using the remote controller for a long time.

 
**Methods for setting remote controller:**

This remote controller has the following methods for setup, you can choose any of them.


\*\*\*\*\*

**A. Inputting code:**


1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV. Find the three digits code from the code list.



 2, Press "SET" button, then press "POWER" button, till the indicator lamp lights, then release the buttons, the remote controller will be in the state of inputting code.



 3, Enter the first set of three-digit code in order. When you input each digit, the indicator lamp will flash one time, when you enter all of the three digits, the indicator lamp will turn off, setting to be finished. If the code is more than one set, please use first one at first.




4, Test other function buttons can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.

**B. Manually searching for the code:**

 1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.




2, Press "SET" button, then press "POWER" button, till the indicator lamp lights, then release the button, the remote




will be in the state of Manually searching for the code.

 3, Press the "VOLUME+" button one time, the indicator lamp will flash one time, please pay attention to your TV, see the volume symbol appears on your TV or not, if not, please repeat this procedure.




 4, Till the volume symbol appears on your TV, test other function buttons (except SET, POWER, and VOLUME button) can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.




**C. Automatically searching code:**

 
1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.



 2, Press and hold the "SET" button for about 6 seconds, till the indicator lamp lights, the remote controller will enter automatic search state, please pay attention to your TV, see the volume symbol appears on your TV or not, if yes, please release "SET" button at once, set finished.




 3, Test other function buttons (except SET, POWER, and VOLUME button) can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.





**D. Point to Point Brand Searching:**

 1, Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV. Find out the corresponding brand of your TV on this remote control, for example, SKYWORTH = "0"



  2, Press and hold the corresponding brand button for three seconds, the indicator lamp will flash, when the volume symbol appears on your TV, release button at once, the indicator lamp will turn off, set to be finished.



**E. Restore factory Settings**

Press "SET" button, then press "0", release the button, the indicator will flash two times, the remote controller restore factory Settings

**Brand symbol table**

BRAND	SLEEP	POWER	MENU	HOME	1	2	3	4	5	6	7
AKIRA	ACC	BEK	ESL	SLP							
LG	SEARCH										

\*\*\*\*\*

**Русский**

**A. Поиск нужной марки телевизора с помощью ввода кода вручную**

 
1. Включите телевизор и в перечне кодов найдите тот, который соответствует марке Вашего телевизора.




2. Одновременно нажимайте кнопки "SET" и "POWER", пока не загорится индикаторная лампочка.



3. Введите три первых цифры кода, соответствующего модели телевизора, после ввода кода индикатор перестанет гореть, установка завершена



 4. Проверьте работу кнопок на ПДУ. При наличии проблем повторно выполните процедуру настройки, начиная с шага 2.



**B. Способ ручного поиска кода:**

1. Включите телевизор и направьте на него пульт.



2. Одновременно нажимайте кнопки "SET" и "POWER", пока не загорится индикаторная лампочка. Тогда релиз, на этот раз в состоянии ручного поиска.



3. Нажмите кнопку "громкость+", затем освободите её, когда появится символ громкости, при каждом нажатии индикатор мигает один раз, если не появится символ громкости, повторите операцию.



4. После появления символа громкости проверьте другие кнопки (кроме кнопки настройки, кнопки питания, кнопки громкости). Если другие функции нормальные, нажмите кнопку "настройки", индикатор настройки гасит, настройка выполнена.

 


**C. Модели с функцией автоматического поиска**

1. Включите телевизор и направьте на него пульт.



2. Удерживайте нажатой кнопку "SET", пока не загорится индикаторная лампочка. Индикаторная лампочка начнёт мигать. Пульт активизировал функцию автоматического поиска. Внимательно смотрите на экран телевизора, не отпуская кнопку "SET". Введите три первых цифры кода, соответствующего модели телевизора.



3. Проверьте работу кнопок на ПДУ (Установите кнопку, кнопка питания, клавиши регулировки громкости, кроме). При наличии проблем повторно выполните процедуру настройки, начиная с шага 2.




**D.**

 1. Найдите код, соответствующий модели вашего телевизора. Например, для SKYWORTH – это "0". Включите телевизор и направьте на него пульт.



2. Удерживайте нажатой кнопку кода, пока не загорится индикаторная лампочка (около 3 секунда). Не отпускайте кнопку, и индикаторная лампочка начнёт мигать. Активизировался режим поиска кода. Когда на экране появится символ громкости, отпустите кнопку кода. Индикаторная лампочка погаснет. Проверьте работу кнопок на ПДУ. При наличии проблем повторно выполните процедуру настройки, начиная с шага 2




**Сравнительная таблица символов марки**

BRAND	SLEEP	POWER	MENU	HOME	1	2	3	4	5	6	7
AKIRA	ACC	BEK	ESL	SLP							
LG	SEARCH										


\*\*\*\*\*

**Еspañol**

 
**A. Ingresa el código**  
1, Encender el televisor, apunte el control remoto hacia televisor. luego encontrar el correspondiente código de tres dígitos de la marca correspondiente en la tabla de códigos



 2, Presiona al mismo tiempo el botón SET y POWER, hasta la luz indicadora se enciende, luego suelta el botón por lo que se convierte en el estado de entrada de código



 3, Ingresar primer conjunto de código de tres dígito. cada vez que un dígito es la entrada, la luz de indicación parpadeara una vez, después que todos los 3 dígitos ha ingresado, la luz de indicador estaría apagado, si el código es más de un conjunto. por favor, utilice la primera.



4, prueba si otros botones de función podría funcionar bien, como el botón de silencio (mute) si no, repita los pasos 2 hasta que encuentre un conjunto de código adecuado.



**B. La búsqueda manual del código**

1, Encender el televisor apunte el control remoto hacia televisor.



2, Presiona al mismo tiempo el botón SET y POWER, hasta la luz indicadora se enciende, luego suelta el botón por lo que se convierte en el estado de entrada de código



3, presione el botón de volumen + una vez y luego suéltelo. ver si el simbolo de volumen aparece en la pantalla de TV, si no se produce tal simbolo, repita el procedimiento.



 
4, Después de que el simbolo de volumen aparece, pruebe otro botón de

función (excepto el ajuste(SET), POWER, VULUMEN), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se apagará, lo que significa que la configuración se ha terminado.




**C. La búsqueda automática del códigos.**


1, Encender el televisor, apunte el control remoto hacia televisor.



 2 Presione y mantenga el botón de ajuste(SET) durante unos 6 segundos hasta la luz indicadora se enciende. Ver si el simbolo de volumen aparece en la pantalla, si es así, suelte de inmediato el botón SET para detener la búsqueda automática.



 3, pruebe otro botón de función (excepto el ajuste (SET), POWER, VULUMEN), si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se apagará, lo que significa que la configuración se ha terminado. si no, repita los pasos 2 hasta que encuentre el código adecuado.




**D. Mode de búsqueda de punto a punto**

1, Encender el televisor manualmente, apunte el mando a distancia hacia el televisor, busque la marca correspondiente de TV, tal como SKYWORTH con su simbolo 0.



 2, pulsada botón de simbolo de marco correspondiente, durante unos 3 segundos no suelte el botón hasta que la luz indicador parpadea, Cuando aparece el simbolo de volumen en la pantalla de TV, suelte inmediatamente el botón, y la luz de indicador apagará. Pruebe si el control remoto funciona bien, si no, repita el procedimiento.



**La table de symbole correspondant à la marque**

BRAND	SLEEP	POWER	MENU	HOME	1	2	3	4	5	6	7
AKIRA	ACC	BEK	ESL	SLP							
LG	SEARCH										

**E. Restaurar los ajustes de fábrica**  
Pulse el botón "SET", después pulse el número 0, la liberación, el indicador parpadea dos veces, restablecer la configuración de fábrica

\*\*\*\*\*

**Warm Tips**

If you have any problems when you set or use this remote controller, please try to do as follow:

- When you set this remote controller, please do according to the steps of the method "inputting code". If it can't control your device, Please input the other codes according to sequence.
- If you have input wrong codes, but the indicator still light, you just need to input the correct code. If the indicator turn off, you need to reset from step 1.
- when you use the method "Manually searching for the code", because the codes are too much, you need to wait patiently

**Technical parameters**

- Remote Controlling Distance: About 8 meters (varies by different types)
  - Battery Type: two pieces of AAA Batteries After-sales Service
- If the remote controller has problems or could not be used temporarily, please contact our company as soon as possible. We would make efforts to offer you with best services. But do not disassemble or repair it by yourself. We would not be responsible for remote controllers that have been disassembled without authorization.

To ensure that you could enjoy good after-sales service, please keep the shopping bills or receipts when buying the product. The company reserves the final interpretation of this specification. The design and technical parameters could be changed without notice.

000



AOC  
AOC

002



GENERAL  
LCD-831

003



GENERAL  
LCD-832

004



IZUMI  
TL19H405B

005



IZUMI  
0152

006



EN  
30303D

010



HOB301  
MYSTERY KT6957 6857

011



HOB117  
AKIRA TC1860F1

012



HOB187  
GK23J6-C15

013



HOB279  
AKIRA LCT-15CHST

014



4-3-2010-002

015



BBK  
BBK

016



BBK  
EN-31603B

017



HOB158  
BBK LT1504

018



HOB332  
BBK CAMERON

019



HOB380  
RC2465

020



HOB387  
RC-2603

021



HVD208  
BBK

022



HVD209  
RC1529

023



HOB228  
LCD 831

024



HOB283  
SUPRA 4627STV  
-LC1504

025



HOB302  
HYUNDAI  
1587 RCF1B

026



HOB303  
SUPRA306  
STV-LC1515

027



HOB327  
Supra RC3b

028



HOB328  
Supra RCF3b

029



HOB409  
SUPRA  
Y-72C2

030



HOB410  
SUPRA RC6b

031



HOB411  
SUPRA  
RC12

032



RCF1B  
RCF1B

033



SUPRA  
BD-212

034



SUPRA  
HOF12H126  
GPD11

035



SUPRA  
RC1b

036



SUPRA  
RC5b

037



SUPRA  
RC5db

038



SUPRA  
RC13b

039



SUPRA  
RC-I18-0B

040



SUPRA  
STV-LC2615ED

041



HOB168  
SHIVAKI  
BT0451C

042



HOB231  
SHIVAKI 02

043



ROLSEN  
ER-31607R

046



HTC056  
RC1994907-01

047



HTC058  
RC198

048



HOB333  
81E829

049



HOB394  
81E503

050



HOB227  
ORION

051



HOB252  
OPENBOX  
-1253

052



HOB281  
MYSTERY  
5195

053



HOB282  
MYSTERY  
8151

054



HOB301  
MYSTERY  
KT6957 6857

055



HOB326  
MTV-1914LW

056



MESTERY  
LCD LED TV  
NEW

057



HSR499  
HIVION

058



HOB402  
ISTAR

059



HOB403  
ISTAR

060



HOB405  
ISTAR

061



ER-31607

062



HOB438  
ER-31607R  
-1098#

063



LCD-2277RC

066



HOB302  
HYUNDAI 1587  
RCF1B

067



HOB376  
H-LCD2202GCO  
VA1028SJ

092



HOB341  
STV-LC1914W

093



HOB418  
ZD-RC30

094



DMTECH  
DMTECH

095



HOB262  
HOB262

096



HOB344  
HOF45A1-2

097



HOB249  
PARS

098



HOB292  
H502-2

099



HOB013  
HOF-54B1.4

100



HOB339  
GI S2138

101



HOB381  
HOF12E  
148GPD5

102



HOB346  
HOF10G  
705GPD9

103



SONIC  
QT-112

104



SUNSTECH  
TL1970HD

105



HOB195  
H-LCDVD2200

106



HOB196  
HOB196

107



HOB314  
Singer LCDKZG  
-108

108



HOB386  
RM-611

109



HOB308  
IR1492 SENCOR

110



HOB310  
HOB310

068



HOB390  
CH-2145

069



FUSION  
RC3b\_1042

070



HOB198  
FUNAI 48KEY

071



IR1628  
FUNAI PC221

073



HOB018  
ELENBERG  
Y27401

074



HOB354  
ELENBERG

079



HOB151  
BERICOM008

080



HOB189  
HOB189

081



HOB264  
RC-A3-01

082



HOB273  
HOB273

083



HOB373  
EN-21662B

084



HOB223  
RC-L-05

085



HOB225  
RC-L-06

086



HOB108  
ACH-P-2

087



HOB149  
BERICOM006

088



HOB150  
BERICOM007

089



HOB206  
EL-41UA299

090



HOB329  
T15E01MT

091



HOB330  
H-LED32V6

112



HOB342  
STV  
-LC1985WL

113



HOB382  
Gi HOF12B441  
GPD11

114



HOB220-NF021RD  
NF039RD  
NF031RD  
-NF036RD 4IN1

115



NF039RD  
NF039RD

116



PC221  
01

117



PC222  
02

120



BC10SB  
BC10SB

121



daytron  
LCD TV

122



HOB358  
RC-A03

123



RC  
A06

124



RC  
A10

125



TLCD  
32HD-  
TELEFUNKEN

126



KAIMY  
KAIMY

127



acer  
acer

130



HOB162  
BERICOM009

131



HOB187  
GK23J6-C15

132



LCD-2699

133



HOB229  
OPTICUM9600  
TS20

134



HOB242  
RC1994925

135



HOB253  
SNOWA

136



HOB331  
AKAI  
A4001032

137



HOB353  
KM1128

138



HOB368  
S5 S6 S7  
S8 S9

139



LCD-2318

140



HOD142  
HOD142

141



HOD148  
VT-L9A11

142



HSR553  
CYFROWY  
POLSAT

143



HSR585  
IPM PLATFORM

144



Singer LCD TV  
901-7650-  
31SG1G

145



LCD  
TV FU-1

146



LCT  
01

147



LCT  
02

148



148  
148

149



HOB393  
1253

150



12-17-2011\_001

151



AOC-01

152



AOC-02

153



BENQ-01

154



BENQ-02

155



BENQ-03

352



HCH067-  
CHANGHONG  
GHK-4421A

353



Heir 2

354



HOB477  
AKAI CX-507

355



HOB478  
E-RCU-015

356



HOB479  
AKAI A3001012

357



HOB484  
Akai LTA  
-15A15M

358



HOB489  
MESTERY LCD  
LED TV NEW

359



HOB490  
Polar HTR  
-D18A

360



HOB491  
Polar 55  
LTV6002

361



Orient

362



PROTON 2

363



POLYTRON  
EN-31618P  
81E878

364



HOB864  
SNOWA  
T202-1

365



HOB455  
ELECTRON  
T-81100

366



HOB457  
RL-32L700U  
3D

367



HOB464  
BRAVIS  
LED2868 HQ

368



HOB465  
DIGITAL  
DLE-4011

370



HOB46  
LUXEON  
LED3213 HQ

371



ORION EP  
22 LCD2623

372



HOB493  
HAIER

156 157 158 159 160 161 162 163 164 165 166 167 168 169 170 171 348 349 350 351



BENQ-04 BENQ-05 VIZIO NEC RP-42L1 SANYO JXPYR ROLJEN RL-32700U POLYTRON 81f579 SAM\_2446 SAM\_2443 SAM\_2457 lcd tv AKAI A3001012 AKAI CX-507 BBK EN-31907 CHANGHONG GHK-4421A E-RCU-015 BBK\_EN-31907 Benq china EcoStar 2

373 374 375 376 377 378 379 380 381 382 383 384 385 386 387 388 389 390 391 396 397



HOB494 SUPRA HOB498 SHOWNIC LEA-19V07P IZUMI 81F579 ORION OR-LCD2 FUSION RC21b SUPRA RC6w SUPRA RC8b SUPRA RC10w SUPRA RC18b RC-LEM100 BBK RC-LEM101 BBK RC-LED100 IZUMI TL26H211B JAC SKY LINE TRUMAN union tech ATLAS HD100 HOB688 ATLSS HD-200S

# HUAYU<sup>®</sup> RM-L1130+8



398 KK-Y331J    399 KK-Y331J    400 HD LED100    401 GBTV ONGOV59    402 XY-B02E  
403 LCD TV PHONAR    405 PHONAR LED TV    406 DAWA MV    407 IDEA    408 IDEA    409 IDEA    410 IDEA    411 IDEA    412 IDEA    413 IDEA    414 IDEA    415 AOC-02    416 DEX LT-2220    417 ORION LED2643    418 Akai SLP-006P



440 051D RED    441 33585    442 RC33729    442 HOB842    442 34090  
442 34091    443 RC31277    444 Fusion RC25b    445 RCF23b    446 RC-E23    449 AKI AK61    450 AKI LCD AK66    451 AKI LCD AK68    452 AKI-OND IGO LCD    453 ONIDA LCD    454 ONIDA LCD ON87    516 051D BLACK    520 SNOWA 51163    528 BLAUPUNKT    531 J-1274



419 Fusion FLT V 22H11    420 Fusion FLT V 32H17    421 FUSION RC15b    422 Shivaki K77    423 Shivaki K78    424 Supra TV-DVD    426 RC-GK22G1    427 H-LCD3210    428 LED321LC    429 SKYPRIME HD    430 SUPRA RC21b-1219    431 ORION LCD    432 TC1860F1-RS    433 JH-11370    434 LED-851    435 RC-D3    436 YC-53    437 STV-22LED5    438 LED-EH4720BF    439 DNS M28AM8



540 MERTER 33186    542 BRAVIS LED-1615    543 Marshal ME-2409    544 ONIDA LCD1    545 Akai HOF08J001    546 Polar 94 LTV6004    547 AN-LT3222 AN-LT3225 AN-LT2416    548 FUSION HY-079    549 SATURN LED40FHD500U    540 DEXP 16A3000    540 RUBIN RB-28D7T2C    550 DNS S19ASL1    551 RM-NST60    533 RM-SK09

