

Instruction for UNIVERSAL LCD/LED TV REMOTE CONTROLLER



000 AOC AOC
 002 GENERAL LCD-831
 003 GENERAL LCD-832
 004 IZUMI TL19H405B
 005 IZUMI 0152
 006 EN 30303D
 010 HOB301 MYSTERY KT6957 6857



011 HOB117 AKIRA TC1860F1
 012 HOB187 GK23J6-C15
 013 HOB279 AKIRA LCT-15CHST
 014 4-3-2010-002
 015 BBK BBK
 016 BBK EN-31603B
 017 HOB158 BBK LT1504
 018 HOB332 BBK CAMERON
 019 HOB380 RC2465
 020 HOB387 RC-2603
 021 HVD208 BBK



022 HVD209 RC1529
 023 HOB228 LCD 831
 024 HOB283 SUPRA 4627STV-LC1504
 025 HOB302 HYUNDAI 1587 RCF1B
 026 HOB303 SUPRA306 STV-LC1515
 027 HOB327 Supra RC3b
 028 HOB328 Supra RCF3b
 029 HOB409 SUPRA Y-72C2
 030 HOB410 SUPRA RC6b
 031 HOB411 SUPRA RC12
 032 RCF1B RCF1B



 
033 SUPRA BD-212
 034 SUPRA HOF12H126GPD11
 035 SUPRA RC1b
 036 SUPRA RC5b
 037 SUPRA RC5db
 038 SUPRA RC13b
 039 SUPRA RC-118-0B
 040 SUPRA STV-LC2615ED
 041 HOB168 SHIVAKI BT0451C
 042 HOB231 SHIVAKI 02
 043 ROLSEN ER-31607R



046 HTC056 RC1994907-01
 047 HTC058 RC198
 048 HOB333 81E829
 049 HOB394 81E503
 050 HOB227 ORION
 051 HOB252 OPENBOX-1253
 052 HOB281 MYSTERY 5195
 053 HOB282 MYSTERY 8151
 054 HOB301 MYSTERY KT6957 6857
 055 HOB326 MTV-1914LW
 056 MESTERY LCD LED TV NEW
 057 HSR499 HIVION



058 HOB402 ISTAR
 059 HOB403 ISTAR
 060 HOB405 ISTAR
 061 ER-31607
 062 HOB438 ER-31607R-1098#
 063 LCD-2277RC
 066 HOB302 HYUNDAI 1587 RCF1B
 067 HOB376 H-LCD2202GCOVA10285J
 068 HOB390 CH-2145
 069 FUSION RC3b_1042
 070 HOB198 FUNAI 48KEY
 071 IR1628 FUNAIPC2

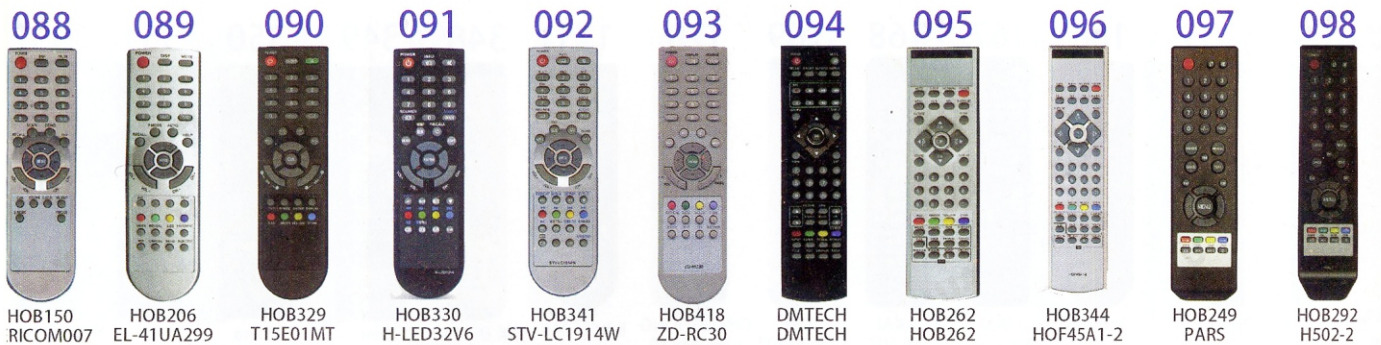

HOB018 IBERG Y27401 HOB354 ELENBERG HOB151 BERICOM008 HOB189 HOB189 HOB264 RC-A3-01 HOB273 HOB273 HOB373 EN-21662B HOB223 RC-L-05 HOB225 RC-L-06 HOB108 ACH-P-2 HOB149 BERICOM006

 
 
 
 
HOB150 RICOM007 HOB206 EL-41UA299 HOB329 T15E01MT HOB330 H-LED32V6 HOB341 STV-LC1914W HOB418 ZD-RC30 DMTECH DMTECH HOB262 HOB262 HOB344 HOF45A1-2 HOB249 PARS HOB292 H502-2

HOB013 OF-54B1.4 HOB339 GI S2138 HOB381 HOF12E148GPD5 HOB346 HOF10G705GPD9 SONIQ QT-112 SUNSTECH TL1970HD HOB195 H-LCDVD2200 HOB196 HOB196 HOB314 Singer LCDKZG-10G HOB386 RM-611 HOB308 IR1492 SENCOR

HOB310 HOB310 HOB342 STV-LC1985WL HOB382 GI HOF12B441GPD11 HOB320-NF021HD NF020RD-NF031RD-NF036RD 4IN1 NF039RD NF039RD PC221 01 PC221 02 BC10SB BC10SB daytron LCD TV HOB358 RC-A03 RC A06 RC A10


TLCD D-TELEFUNKEN KAIMY KAIMY acer acer HOB162 BERICOM009 HOB187 GK23J6-C15 LCD-2699 HOB229 OPTICUM9600 TS20 HOB242 RC1994925 HOB253 SNOWA HOB331 AKAI A4001032 HOB353 KM1128 HOB368 S5 S6 S7 S8 S9

.CD-2318 HOD142 HOD142 HOD148 VT-L9A11 HSR553 CYFROWY POLSAT HSR585 IPM PLATFORM Singer LCD TV 901-7650-31SGIG LCD TV FU-1 LCT 01 LCT 02 148 148 HOB393 1253 12-17-2011_001

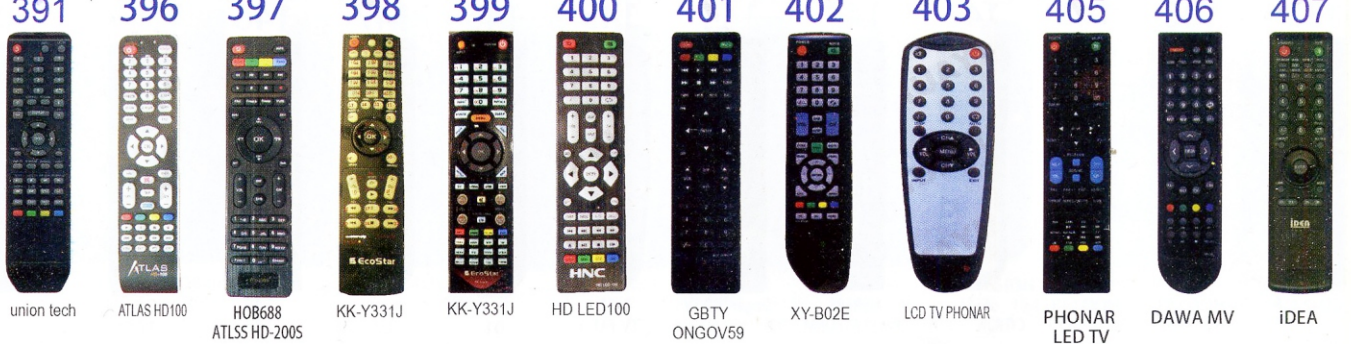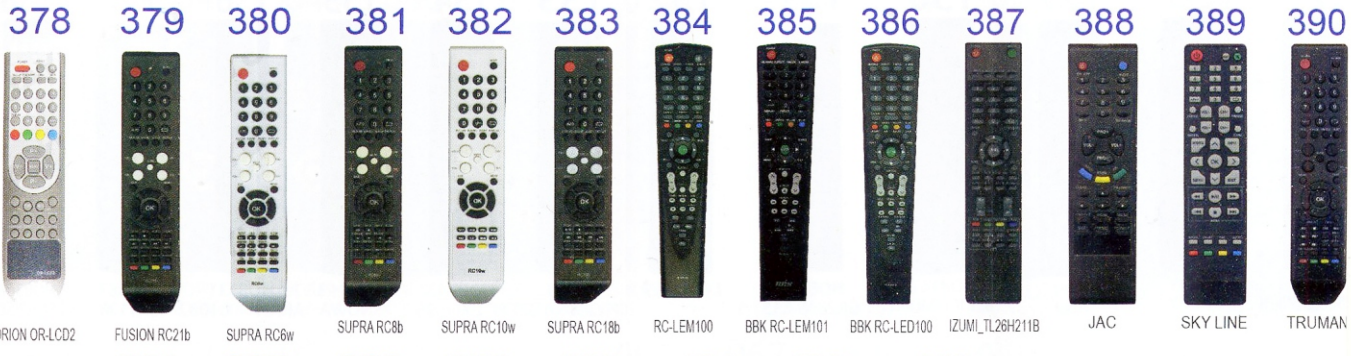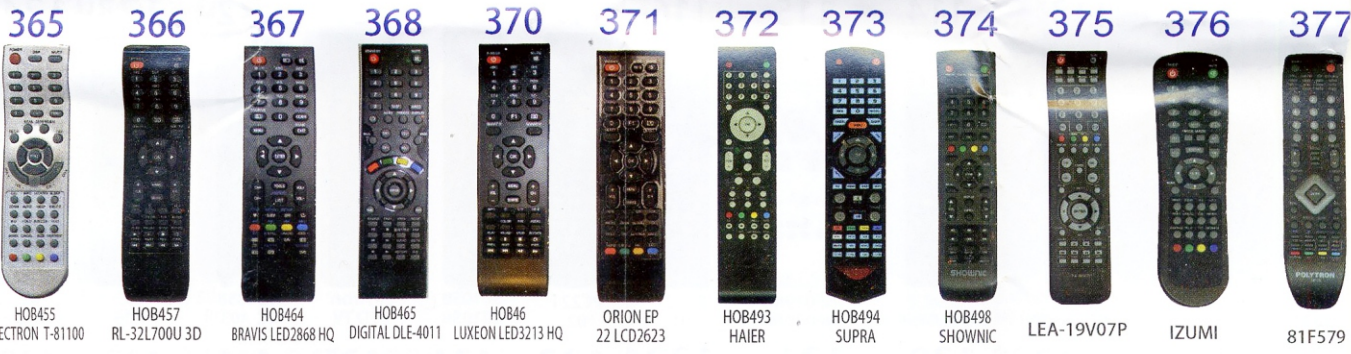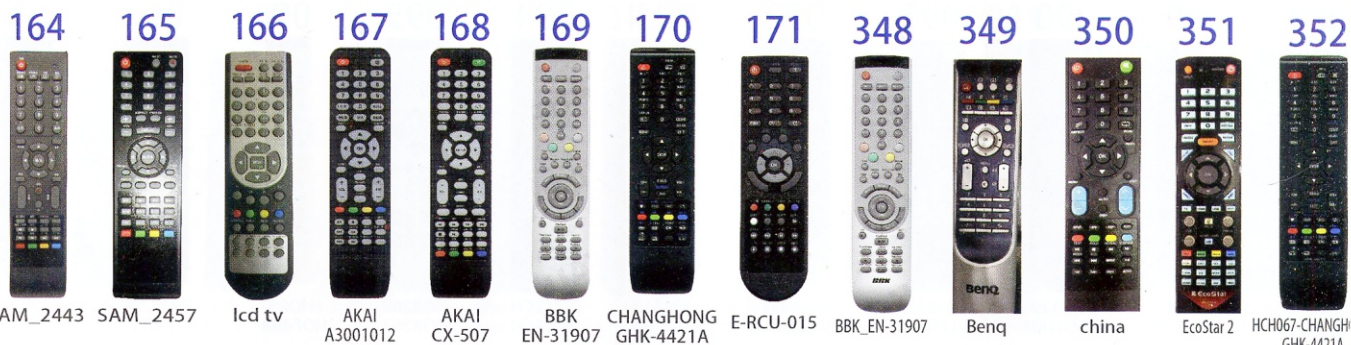



 408 IDEA 409 IDEA 410 IDEA 411 IDEA 412 IDEA 413 IDEA 414 IDEA 415 AOC-02 416 DEX LT-2220 417 ORION LED2643 418 Akai SLP-006P 419 Fusion FLTV 22H11

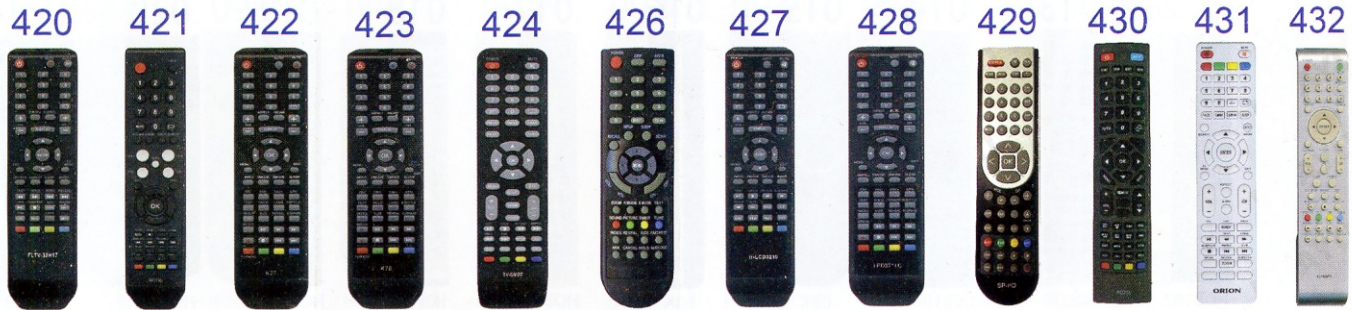

420 Fusion FLTV 32H17 421 FUSION RC15b 422 Shivaki K77 423 Shivaki K78 424 Supra TV-DVD 426 RC-GK22G1 427 H-LCD3210 428 LED321LC 429 SKYPRIME HD 430 SUPRA RC21b-1219 431 ORION LCD 432 TC1860F1-RS



 
433 JH-11370 434 LED-851 435 RC-D3 436 YC-53 437 STV-22LED5 438 LED-EH4720BF 439 DNS M2&AM8 440 051D RED 441 33585 442 RC33729 442 HOB842 442 34090 442 34091



443 RC31277 444 Fusion RC25b 445 RCF23b 446 RC-E23 449 AKI AK61 450 AKI LCD AK66 451 AKI LCD AK68 452 AKI-OND IGO LCD 453 ONIDA LCD 454 ONIDA LCD ON87 516 051D BLACK 520 SNOWAS1163 528 BLAUPUNKT



531 J-1274 540 MERTER33186 542 BRAVIS LED-1615 500 STV-42LED5 544 ONIDA LCD1 545 Akai HOF08J001 546 Polar 94LTV6004 547 AN-LT3222 AN-LT3225 AN-LT2416 548 FUSION HY-079 549 SATURN LED40FHD500U 540 DEXP 16A3000 540 RUBIN RB-28D72C 550 DNS S19ASL1

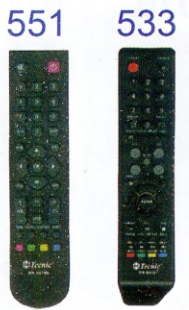

551 RM-NST60 533 RM-SK09

Methods for setting remote controller:

This remote controller has the following methods for setup, you can choose any of them.

A. Inputting code:

1. Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV. Find the three digits code from the code list.



2. Press "SET" button, then press "POWER" button, fill the indicator lamp lights, then release the buttons, the remote controller will be in the state of inputting code.



3. Enter the first set of three-digit code in order when you input each digit, the indicator lamp will flash one time, when you enter all of the three digits, the indicator lamp will turn off, setting to be finished. If the code is more than one set, please use first one at first.



4. Test other function buttons can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.



B. Manually searching for the code:

1. Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.



2. Press "SET" button, then press "POWER" button, fill the indicator amp lights, then release the button, the remote controller will be in the state of manually searching for the code.



3. Press the "VOLUME+" button one time, the indicator lamp will flash one time, please pay attention to your TV, see the volume symbol appears on your TV or not, if not, please repeat this procedure.



4. If the volume symbol appears on your TV, test other function buttons except SET, POWER, and VOLUME button can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.



C. Automatically searching code:

1. Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.



2. Press and hold the "SET" button for about 6 seconds, till the indicator lamp lights, the remote controller will enter automatic search state. Please pay attention to your TV, see the volume symbol appears on your TV or not, if yes, please release "SET" button at once, set finished.



3. Test other function buttons (except SET, POWER, and VOLUME button) can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.



D. Point to Point Brand Searching:

1. Turn on your TV set, let your TV set be in the normal state play and aim the remote controller in the front of the TV. Find out the corresponding brand of your TV on this remote control, for example, SKYWORTH is "0".



2. Press and hold the corresponding brand button for three seconds, the indicator lamp will flash, if set to be finished.



3. Удерживайте нажатой кнопку "SET", пока не загорится индикаторная лампочка. После появления символа громкости проверьте другие кнопки (кроме кнопок "MUTE", "POWER" и "VOLUME"). Если другие функции работают, нажмите кнопку "настройка". Индикатор настроится на точку, настройка выполнена.



4. Проверьте работу кнопок на ПДУ. При наличии проблем повторно выполните процедуру настройки, начиная с шага 2.



E. Restore factory Settings

Press "SET" button then press "0", to erase the button, the indicator will flash two times, the remote controller restore factory settings.



1. Включите телевизор и в первом касании нажмите ту кнопку, которая соответствует марке Вашего телевизора.



2. Одновременно нажмите кнопки "SET" и "POWER", пока не загорится индикаторная лампочка.



3. Введите три первых цифры кода соответствующей модели телевизора, после ввода кода индикатор перестанет гореть, установка завершена.



4. Продолжите работу кнопок на ПДУ. При наличии проблем повторно выполните процедуру настройки, начиная с шага 2.



B. Способ ручного поиска кода:

1. Включите телевизор и направьте на него пульт.



С. Модели с функцией автоматического поиска

1. Включите телевизор и направьте на него пульт.



2. Удерживайте нажатой кнопку "SET", пока не загорится индикаторная лампочка. Пульт автоматически выполнит поиск модели телевизора.



3. Проверьте работу кнопок на ПДУ (установите кнопку, описана в таблице, клавиши регулировки громкости, кроме). При наличии проблем повторно выполните процедуру настройки, начиная с шага 2.



4. Проверьте работу кнопок на ПДУ. При наличии проблем повторно выполните процедуру настройки, начиная с шага 2.

 


A. Ingrese el código

1. Encienda el televisor, apunte el control remoto hacia televisor. Luego encuentre el correspondiente código de tres dígitos de la marca correspondiente en la tabla de códigos.



2. Presione al mismo tiempo el botón SET y POWER. Hasta la luz indicadora se encienda, luego ajuste el botón por lo que se convierte en el estado de entrada de código.



3. Ingrese primer conjunto de código de tres dígitos cada vez que un dígito se la entrada, la luz de indicación parpadeará una vez, después que todos los 3 dígitos ha ingresado, la luz de indicador estará apagado, si el código es más de un conjunto, por favor, utilice la primera.



4. Prueba si otros botones de función podría funcionar bien, como el botón de silencio (mute) si no, repita los pasos 2 hasta que encuentre un conjunto de código adecuado.



B. La búsqueda manual del código

1. Encender el televisor, apunte el control remoto hacia televisor.



2. Presione al mismo tiempo el botón SET y POWER. Hasta la luz indicadora se encienda, luego suelta el botón por lo que se convierte en el estado de entrada de código.



3. Presione el botón de volumen - una vez y luego suéltelo, ver si el símbolo de volumen aparece en la pantalla de TV, si no se produce su símbolo, repita el procedimiento.



4. Después de que el símbolo de volumen aparece, pruebe otros botón de función (excepto el ajuste (SET), POWER, VOLUME) si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se apagará, lo que significa que la configuración se ha terminado.



C. La búsqueda automática del código

 
1. Encender el televisor, apunte el control remoto hacia televisor.



2. Presione y mantenga el botón de ajuste (SET) durante unos 6 segundos hasta la luz indicadora se encienda. Ver si el símbolo de volumen aparece en la pantalla al presionar el botón SET. Si para detener la búsqueda automática.



3. Prueba otro botón de función (excepto el ajuste (SET), POWER, VOLUME) si bien el trabajo, pulse el botón de ajuste inmediato y la luz de indicación se apagará, lo que significa que la configuración se ha terminado. Si no, repita los pasos 2 hasta que encuentre el código adecuado.



D. Modo de búsqueda de punto a punto

1. Encender el televisor manualmente, apunte el mando a distancia hacia al televisor, busque a marca correspondiente de TV, tal como SKYWORTH con su símbolo 0.



2. pulsando botón de símbolo de comercio correspondiente, durante unos 3 segundos no suelta el botón hasta que la luz indicadora parpadeará. Cuando aparece el símbolo de volumen en la pantalla de TV, suelte inmediatamente el botón y la luz de indicador apagará. Probar si el control remoto funciona bien, si no, repita el procedimiento.



E. Restaurar los ajustes de fábrica

Pulse el botón "SET" después pulsas el número 0, la liberación, el indicador parpadeará dos veces, restablecer la configuración de fábrica.



Warm tip
If you have any problems when you set or use this remote controller, please try to do as follow:
• When you set this remote control, please do according to the steps of the method "inputting code". If it can't control your device, please input the other codes according to sequence.
• If you have input wrong codes, but the indicator still light, you just need to pp at the correct code. If the indicator turn off, you need to reset from step 1.
• who you use the method "Manually searching for the code", because the codes are too much, you need to wait patiently.

 
Technical parameters
• Remote Controlling Distance: About 8 meters (varies by different types)
• Battery Type: two pieces of AAA Batteries After-sales Service
If the remote control has problems or could not be used temporarily, please contact our company as soon as possible. We would make efforts to offer you our best services. But do not disassemble or repair it by yourself! We would not be responsible for remote controllers that have been disassembled without authorization.

In warm that you can't set up the remote control, please try the following steps to correct the problem.
The Company assumes the full responsibility of the specification. The design of the remote controller is subject to change without notice.


Instruction for UNIVERSAL LCD/LED TV REMOTE CONTROLLER

Thank you for using our company remote controller products. When it is the first time to put in the batteries, please try it first. If it could work well with all of its functions, the product can be used directly without setup. If it could not work well, it should be set with the following methods before controlling your TV. This remote controller would not lose its memory when you change batteries, no need to reset.

introduction:
RM-L119546 is the newest universal LCD/LED TV remote controller. Comprehensive care at different levels need, it can control old or new TV, famous brand or un-famous brand TV, nearly all models for TV. Commonly used functions and menu button of including: Easy setup, conveniently use, it is the best choice for your remote controller using, damage, replacement, it will bring more convenient for your life.

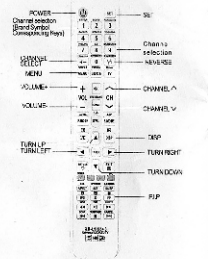

 Battery Installation
In accordance with the "+" symbols which is indicated inside the battery cabinet, open the cover and put into two new AAA (AAA) batteries and close the cover, which is shown in the figure.



Battery Description
The remote controller is a low-power consuming product. The lifetime of batteries is about 12 months under normal circumstances. If it is improperly used or operated, the lifetime would be shortened.
Please do not put old and new batteries or different types of batteries together.
In case of battery leakage, the batteries must be removed and the battery cabinet should be cleaned before putting into new batteries.
You'd better recharge the batteries from the battery cabinet if you manage to stop using the remote controller for a long time.

1. Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.



2. Press "SET" button, then press "POWER" button, fill the indicator amp lights, then release the button, the remote controller will be in the state of manually searching for the code.



3. Press the "VOLUME+" button one time, the indicator lamp will flash one time, please pay attention to your TV, see the volume symbol appears on your TV or not, if not, please repeat this procedure.



4. If the volume symbol appears on your TV, test other function buttons except SET, POWER, and VOLUME button can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.



C. Automatically searching code:

1. Turn on your TV set, let your TV set be in the normal state play, and aim the remote controller in the front of the TV.



2. Press and hold the "SET" button for about 6 seconds, till the indicator lamp lights, the remote controller will enter automatic search state. Please pay attention to your TV, see the volume symbol appears on your TV or not, if yes, please release "SET" button at once, set finished.



3. Test other function buttons (except SET, POWER, and VOLUME button) can work well or not, such as "MUTE". If not, repeat steps 2 to 3, until you find the suitable code.



D. Point to Point Brand Searching:

1. Turn on your TV set, let your TV set be in the normal state play and aim the remote controller in the front of the TV. Find out the corresponding brand of your TV on this remote control, for example, SKYWORTH is "0".



2. Press and hold the corresponding brand button for three seconds, the indicator lamp will flash, if set to be finished.



3. Удерживайте нажатой кнопку "SET", пока не загорится индикаторная лампочка. После появления символа громкости проверьте другие кнопки (кроме кнопок "MUTE", "POWER" и "VOLUME"). Если другие функции работают, нажмите кнопку "настройка". Индикатор настроится на точку, настройка выполнена.



4. Проверьте работу кнопок на ПДУ. При наличии проблем повторно выполните процедуру настройки, начиная с шага 2.



B. Способ ручного поиска кода:

1. Включите телевизор и направьте на него пульт.



2. Удерживайте нажатой кнопку "SET", пока не загорится индикаторная лампочка. Пульт автоматически выполнит поиск модели телевизора.



3. Проверьте работу кнопок на ПДУ (установите кнопку, описана в таблице, клавиши регулировки громкости, кроме). При наличии проблем повторно выполните процедуру настройки, начиная с шага 2.



4. Проверьте работу кнопок на ПДУ. При наличии проблем повторно выполните процедуру настройки, начиная с шага 2.

