


# RM-P1375

## UNIVERSAL PROJECTOR REMOTE CONTROL

### Product Characteristic

Thank you for using our company's remote control products, RM-P1375 is a new development universal remote control for projector. Please try it after the battery installation at first time. If all functions are normal, it can be used directly without any setup. If it doesn't work well, you need to make setup according to the below steps, then can use for your projector. This remote control has permanent memory function and no need to reset when changing batteries.

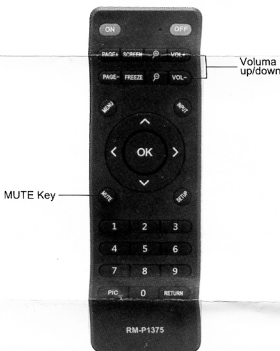

HP	26
INFOCUS	68,88,89,90,92
JVC	77
LG	38,39,40,41,51
MIMIO	85
MITSUBISHI	05,31,32,33,43,69
NEC	25,49,60
OPTOMA	50,91
PANASONIC	01,61,62,70,79
PROJECTOR DESIGN	58
RUNCO	87
SANYO	14,28,29,42,57,79,94
SMART	78,84
SONY	45,67
THEME SCENE	91
TOSHIBA	02,03,06,07,08
VIEWSONIC	04,17,18,22,23,24,56,95
VIVITEK	40
3M	65

### A.Input code

1. Please find the 2-digit code from the codes list.
2. Press the button "ON" and "1" till the indicator lights up, then release two buttons, now the remote control will enter input code mode.
3. Enter the 2-digit code of the corresponding brand you have found, for each 1-digit input, the indicator should flash one time, after inputting the 2-digit code, the indicator will be turned off and setup is finished.
4. Test whether the function keys are normal, such as "MUTE" key. If the function keys do not work normal, repeat steps 2 and 3 till the appropriate code is found.

### B.Full-button learning

1. Press the "ON" button, then press the "2" button. After 3 seconds, the indicator will light, it means remote control enters learning mode.
2. Press the "MUTE" button on the remote control, the indicator will flash slowly, now the remote control is prepared for learning.

### B.Full-button learning

3. Let the transmitter of the original remote control over against the transmitter of this remote controller, and keep the distance about 1-3 cm and don't shake the remote control. Press the "MUTE" key of the original remote control. The indicator flashes three times quickly, and then keeps lighting, it means learning is successful. Repeat step 2-3, learn other keys or relearn this key if not learn successfully..
4. After completely learn all buttons, press "OK" for 3 seconds, indicator will turn off, then exit the learning mode, and all codes to be saved.

### C.Restore factory mode

- Press "ON" key and then press the "0" key for 3 seconds till the indicator light flash 3 times, now the remote control restores to factory mode .  
(Learning content will also be eliminated)

### Compatibility Type List

ACER	13,36,37,76
BARCO	93
BENQ	05,19,20,21,44,59,66,71,82
CANON	28,79,80
CASIO	30,74,71
DELL	27,86
EPSON	34,35,73,83
HITACHI	46,63,75