


K-91E

User's instructong for all-purpose air conditioner remote controller

Product Introduction

Model K-91E ALL-purpose AIR Conditioner Remote Controller has been designed to remotely control various brands and models of the air conditioners. This product is characteristic of point-to-point fast brand searching and automatic digital code searching with low power consumption, complete functions, long transmission distance, easy setting, simple operation and fresh visual appearance and comfortable hand feel which can facilitate you with unlimited convenience. The product has a large LCD screen which provides easy setting and operation. It has but ill-in clock, on/off timer which have facilitated more convenience fou you.

Panel Description:

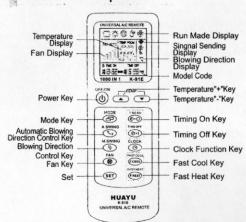

(:) Remarks:

Fast Cool/FAST HEAT:

- Press "Fast Cool"key to automatically set the machine as refrigerating mode,23°C middle wind automatic blowing direction
- Press "FAST HEAT"key to automatically set the machine as heating mode 27°C middle wind automatic blowing direction.

Battery Installation:

1. Remove the battery cover of the remote control install two new 7# battries.



2. Install the battery cover The timer will appear in the left corner of LCD display.



Setting of Remote Control

This remote controller has four setting modes that are marked as A\B\Cand D. Please select one mode for operation.

The brand corresponding point-to-point fast searching

Manually plug-in the air conditioner.aim the remote control at the receiving window of the air conditioner



Press the code key that corresponds to your brand and hold until he air conditioner is startde by giving out a sound signal. Release the key and the setting is completed.



Table of brand corresponding keys

MODE	TIME ON	TIME OFF	TOSHIBA PANASONIC FAST HEAT	
GREE HUALING	KELONG MITSUBISHI	CHIGO MD		
A.SWING	M.WING	FAST COOL		
Haier HISENSE	LG SANYO	DAKE/CHANGHONG SAMSUNG	HITACHI SHARP/HUABAO	



Manually input code

Manually plug-in the air conditioner find the type of the air conditioner in the "Code Table", and find the first code ,for example: "Haier"


Hold"SET" button (for about three seconds)until the conditioner type code flickers in the window press Temperature" ▲ "or" ▼ "buttons until the desired code flicker in the window. When the code is right the air conditioner will start.


Brand	Code		
Haier	000-024		

Press "SET" button and the selected conditioner type code will stop flickering.



  Test whether the remote control button has been effective set.if ves.setting completes_And if no. repeat steps 2-3.






Manually intelligence search type

1. Manually plug-in the air conditioner, aim the remote control at the receiving window of the air conditioner



 Hold "SET"button(fou about six second)until the conditioner type code changes and close the code you need, release the "SET" button indicating you have entered the manually intelligence conditioner type search status .press "SET" button to stop searching until the air conditioner automatically starts.



D Digital automatic search type

Manually plug-in the air conditioner, aim the remotecontrol at the receiving window of the air conditioner



Hold "POWER" button(fou about six second) until the conditioner type code changes in the window, indicating you have entered the high-speed conditioner type search status.press "any one" button to stop searching until the air conditioner automatically starts.



Set Timer Function

Press CLOCK but ton (for three seconds) to enter the clock setting status, and the clock will flicker.Use the Temperature"▲"or"▼" buttons to adjust the current time, and press CLOCK button again to exit setting.



Timing ON/OFF Function

To configure the timer function of the original remote control, press "TIME ON" or "TIME OFF" buttons, and the air conditioner timer lights will go on ,indicating the air conditioner has entered the timed status.



Warm Tips

- This remote controlls is effective if the air conditioner receive works normally.
- If this remote control is intended to be not in use for a long time, please remove the batteries.
- It may possibly caused internal program disorder if this remote control is not operated correctly, in case of that please take out the battery, and install the batteries 35 minutes later, then the remote control may recover normal.

Applicable brand and code list

Brand	Code	Brand	Code	Brand	Code	Brand	Code
AIDELONG, CONROWA	839-845	GUQIAO	909	LANGGE	918	HANGLING,SHUANGLU	750-759
AITE,HICON	740-749	Haier	000-024	LG	400-409	HANGXING	910
AKIRA	873	Hisense	275-294	LIANGYU	863-864	HARP	515-529
AUCMA	250-274	HITACHI, XILENG	450-459	Littleswan	928	HARP	898
AUX	210-234	HONGYI	924	MCQUAY	913-917	SHENGFENG	874
BEIJINGJINGDIAN	875-876	HUABAO	125-134	MD	055-074	SHINCO	235-249
BIG-THUMB	923	HUAGAO	925	MEILING,NISO,TONGLI	790-799	SOGO	908
BOERKA	858-860	HUALING	190-209	MINGXING,BOYIN	922	SOYEA	927
BOSHI	871-872	HUAMEI	865-866	MITSUBISHI	380-399	TCL	155-174
CHANGFU	879	Huawei	902	MITSUBISHI	540-599	TECO	877-878
CHANGHONG	075-099	HUIFENG, CHUANGHUA, GUANGDA	835-838	national	900	TIANJINKONGTIAO	912
CHANGLING	630-649	INYCIN	610-629	NIKKO	897	TIANYUAN	850-854
CHIGO	100-124	JDC	921	PANASONICNATIONAL	460-479	ТОВО	310-329
CHUNLAN	175-189	JIALE .	867-868	PANDA	846-849	TOSHIBA	435-449
CORONA	500-514	JIANGNAN	869-870	QIXING	911	TRANE, MCQUAY	820-834
DAIKIN,ELECTROLUX	530-539	JINBEIJING,FEIGE	810-819	RAYBO	710-729	UTTLEDUCK	888-890
DONGXINBAO	862	JINDA,HUAKE	800-809	RAYBO	899	WANBAO	855-857
FEILU	295-309	JOHNSO	861	RORK	920	WEITELI	891
FRESTECH	892-896	KANGLI,UNI-AIR	730-739	ROWA, JINSONG	760-769	WHIRLPOOL	650-659
FUNAI	919	KELONG	135-154	SAIJO, DENKI	770-779	XINGHE,DONGXIA	882-884
Galanz	885-887	KT02_D001	903	SAMSUNG	410-434	YAIR	600-609
GARRIER, FUJITSU	480-499	KT02_D002	904	SANYO,NEC	330-379	YORK,MEILING	780-789
GLEE	901	KTY001	905	SERENE	929	YUTU	690-709
Goldstar	880-881	KTY002	906	SHAMEI	926	WEILI	670-689
GREE	025-054	KTY004	907	SHANGLING	660-669	OTHER	930-999