


DVB-T2+2 VER.2019

English

INSTRUCTION FOR UNIVERSAL REMOTE CONTROL

Thank you for using the remote controller. When it is the first time to put in the batteries, please try it first. If it could work well with all of its functions, the product can be used directly without setting it. However, if it could not work well, it should be set with the following methods before remote controlling your DVB. The remote controller would not lose its memory when the power is down so that you could replace the battery without resetting it.

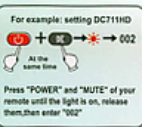

Settings of Remote controller:

The remote controller has the following methods of settings, please choose any of them.

Inputting code:

1. Turn on STB manually, make it in a normal play state, point the remote controller at the STB, and then find the corresponding 3-digit code of the corresponding brand from the code table.
2. Press "POWER" and "MUTE" key of your remote control model, until the light is on, then release two button, enter the corresponding code.
3. Test whether other function buttons (such as "Volume" buttons) could work well. If not, repeat steps 2 and 3 until you find the suitable set of code.

Automatically searching code:

1. Turn on STB manually, make it in a normal play

2. Press "POWER" button, and hold about 6 seconds, the remote control will turn to automatically search mode. When volume appear on your STB, release the button on time, set to be finished.
3. Test whether other function buttons (such as "Volume" buttons) could work well. If not, repeat steps 2 until you find the suitable set of code.

Technical parameters:


Remote Controlling Distance: About 10 meters (varies by different types).
Battery Type: two pieces of AAA Batteries.

русский

Инструкция по эксплуатации универсального пульта дистанционного управления DVB-T2+2

Благодарим за использование данного пульта дистанционного управления. При первом использовании пульта, необходимо вставить батарейки питания и опробовать пульт в работе. В случае надежной работы всех функций, при первом запуске, дальнейшее настраивание пульта не требуется. В противном случае, до начала настройки пульта следует

из способов, предложенных ниже. Настройки пульта сохраняются в памяти, поэтому после замены батареек питания, не требуется производить настройку пульта заново

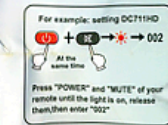

Настройка пульта дистанционного управления: Для настройки пульта следует

способов, указанных ниже.

Ручной ввод кода:

1. Включить телевизор вручную, настроить его на нормальный режим работы, и править пульт дистанционного управления на ресивер, затем найти на рисунке пульт, соответствующий вашему.
2. Нажать кнопку POWER+ MUTE, светодиод на пульте загорится, после чего ввести трехзначный код, соответствующий вашему пульту
3. Убедиться, что все остальные функции (например, кнопки изменения уровня громкости звука (Volume)) работают должным образом. При неправильной работе каких-либо кнопок повторить инструкции пунктов 2 и 3 до тех пор, пока не будет найдена подходящая кодовая комбинация.

Автоматический поиск кода:

1. Включить телевизор вручную, настроить его на нормальный режим работы, направить пульт дистанционного управления на ресивер.
2. Нажать кнопку POWER (ВКЛЮЧИТЬ) и удерживать ее в течение 6 секунд. Включится режим автоматического поиска кода

Дождаться появления индикатора громкости на экране телевизора, затем отпустить кнопку, чтобы завершить настройку.

3. Убедиться, что все остальные функции (например, кнопки изменения уровня громкости звука (Volume)) работают должным образом. При неправильной работе каких-либо кнопок повторить инструкции пунктов 2 и 3 до тех пор, пока не будет найдена подходящая кодовая комбинация.

Технические характеристики:

Дальность действия пульта дистанционного управления: около 10 метров (в зависимости от модели)
Тип батарей питания: 2 батареи типа AAA





153



Philips
RPH5006V8

003



Hisense
HF310T2

021



Hisense
LV30T11

004



Hisense
HF310V3

028



Hisense
UMT 1

178



KABAO
MA7000

193



KABAO
WA10000

095



JVC
Q14-100

096



JVC
3N-10340

098



Linn
DV-2100A

097



Linn
S-102

169



Linn
S91009

169



Linn
S91009

099



Linn
D77-118-0

101



Linn
T2

144



MAGNO
PTV

148



MAG36

040



MDI
S91009

099



MDI
S91009

039



MEZZO
F8811

104



MTC
8800-V49

061



MTC
P8800-0000A

102



Linn
S91009

103



Linn
S91009

104




Linn
S91009

027




Linn
NS-2A

002



Linn
Mony-MVP

105



Linn
Mony-MVP

209



Linn
Mony-MVP

179



Linn
Mony-MVP

146



Linn
Mony-MVP

005



Linn
Mony-MVP

168



Linn
Mony-MVP

022



Linn
Mony-MVP

026



Linn
Mony-MVP

020



Linn
Mony-MVP

017



Linn
Mony-MVP

010



Linn
Mony-MVP

124



Linn
Mony-MVP

044



Linn
Mony-MVP

009



Linn
Mony-MVP

208



Linn
Mony-MVP

125



Linn
Mony-MVP

162



Linn
Mony-MVP

207



Linn
Mony-MVP

162



Linn
Mony-MVP

199



Linn
Mony-MVP

025




Linn
Mony-MVP

008



Linn
Mony-MVP

141



Linn
Mony-MVP

059



Linn
Mony-MVP

171



Linn
Mony-MVP

136



Linn
Mony-MVP

126



Linn
Mony-MVP

136



Linn
Mony-MVP

032



Linn
Mony-MVP

129



Linn
Mony-MVP

128




Linn
Mony-MVP

127



Linn
Mony-MVP

180



Linn
Mony-MVP

184



Linn
Mony-MVP

063



Linn
Mony-MVP

125



Linn
Mony-MVP

064



Linn
Mony-MVP

065



Linn
Mony-MVP

143



Linn
Mony-MVP

